


PRESSURE AND VACUUM SWITCHES ADJUSTABLE DEADBAND MODELS



FEATURES

- Gasketed, Die Cast Aluminum Enclosure with Epoxy Coating
- SPDT Switch Output
- Adjustable Deadband Models/Option
- Sealed, Isolated Metal Bellows Sensors
- Adjustable Pressure Ranges: 30 "Hg Vac to 6000 psi (-1 to 414 bar)

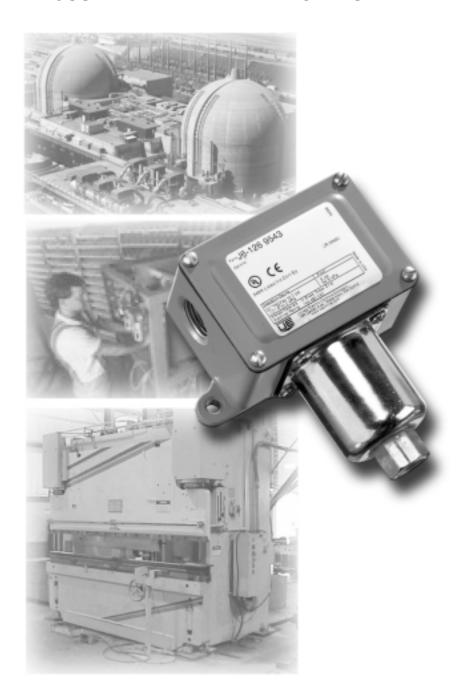

OVERVIEW

The UE J6 is a reliable, sensitive pressure switch, originally designed for instrument air applications in process plants. Its compact design and combination of set-point sensitivity and narrow or optional adjustable deadband, offers cost-saving solutions for a variety of applications.

The J6 is ideally suited for a wide range of industrial processes such as alarm/shutdown and low/high service pressures. OEMs also utilize the J6 in machinery and equipment for threshold protection.



FEATURES

- UL listed and cUL certified
- Optional ATEX or GOST intrinsic safety compliance
- Designed to meet Enclosure Type 4X
- SPDT switch output
- Adjustable deadband models for precise on-off control
- Brass or stainless steel bellows sensors
- External manual reset option

SPECIFICATIONS

STORAGE TEMPERATURE -65° to 160°F (-54 to 71°C)

AMBIENT TEMPERATURE -40° to 160°F (-40 to 71°C); set point typically shifts less than 1% of range for a 50°F

LIMITS (28°C) ambient temperature change

SET POINT REPEATABILITY Models 126-364, 680: ± 1% of adjustable range; models 610-614: ± 1.5% of adjustable

range

SHOCK Set point repeats after 15 G, 10 millisecond duration

VIBRATION Set point repeats after 2.5 G, 5-500 Hz

ENCLOSURE Die cast aluminum, epoxy powder coated, gasketed; captive cover screws

ENCLOSURE CLASSIFICATION Designed to meet Enclosure Type 4X requirements

SWITCH OUTPUT One SPDT; switch may be wired "normally open" or "normally closed"; J6D has an

adjustable deadband switch

15 A 125/250/480 VAC resistive. Electrical switches have limited DC capabilities. **ELECTRICAL RATING**

Consult factory for additional information.

WEIGHT Approx. 1 lb., 8 oz. (0.68 kg.)

1/2" NPT (female) **ELECTRICAL CONNECTION**

PRESSURE CONNECTION All models 1/4" NPT (female) except models S126B-S160B: 1/2" NPT (female)

APPROVALS



UL 508. file #E42272 **cUL** Certified


CSA C22.2 No. 14, file #42272

Gosgostechnadzor Permit (OPTIONAL - Code M406)

OExia IIC T6, Tamb. = -50°C to +60°C Certificate #RRS 04-8897



CENELEC/DEMKO A/S (N.B. #0539)

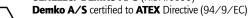

II 1 G EEx ia IIC T6, Tamb. = -50°C to +60°C (OPTIONAL - Code M405)

EN 50014, EN 50020, EN 50284, EN 60079 Certificate #DEMKO 03 ATEX 0335063

CENELEC/TÜV Süddeutschland Bau und Betrieb GmbH (N.B. #0036) **TÜV** certified to PED (97/23/EC)

Category IV, Module H1 (OPTIONAL - Code M407)

Certificate #USA 02/04/38/001 thru USA 02/07/38/033 UEC Compliant to LVD (73/23/EC & 93/68/EEC)

Products rated lower than 50 VAC and 75 VDC are outside of the scope

of the LVD



PRESSURE MODEL CHART

Model	Adjustable Set Poir Low end of range on f High end of range on	all;	Deadband		Over Range Pressure*		Proof Pressure	**
	psi (unless noted)	bar (unless noted)	psi (unless noted)	bar (unless noted)	psi (unless noted)	bar (unless noted)	psi (unless note	bar ed)
Welded 3	16L stainless steel bello	ws and 1/2" NPT (1	female) pressure	connection				
S126B	30 "Hg Vac to 0 psi	-1 to 0	0.2 to 0.8 "Hg	6,8 to 27,1 mbar	3	0,2	5	0,3
S134B	30 "Hg Vac to 20 psi	-1 to 1,4	0.2 to 0.8 "Hg	6,8 to 27,1 mbar	20	1,4	25	1,7
S136B	0 to 50" wc	0 to 124,5 mbar	3 to 6 "wc	7,5 to 14,9 mbar	50 "wc	124,5 mbar	5	0,3
S142B	0 to 18	0 to 1,2	4 to 7 "wc	10 to 17,4 mbar	18	1,2	25	1,7
S148B	0 to 40	0 to 2,8	0.1 to 0.4	6,9 to 27,6 mbar	40	2,8	40	2,8
S152B	0 to 50	0 to 3,4	0.1 to 0.5	6,9 to 34,5 mbar	50	3,4	75	5,2
S156B	3 to 100	0,2 to 6,9	0.2 to 0.8	13,8 to 55,2 mbar	100	6,9	125	8,6
S160B	50 to 180	3,4 to 12,4	0.3 to 1	20,7 to 68,9 mbar	180	12,4	180	12,4
	Welded 316L stainless steel bellows and 1/4" NPT (female) pressure connection (Model 680 not recommended for rapid or high cycling pressure changes)							
354	0 to 50	0 to 3,4	1.5 to 2.5	0,1 to 0,2	50	3,4	75	5,2
356	0 to 100	0 to 6,9	2 to 4	0,1 to 0,3	100	6,9	150	10,3
358	0 to 200	0 to 13,8	3 to 5	0,2 to 0,3	200	13,8	250	17,2
360	0 to 250	0 to 17,2	3 to 5	0,2 to 0,3	250	17,2	330	22,8
362	0 to 350	0 to 24,1	2 to 8	0,1 to 0,6	350	24,1	430	29,6
364	0 to 500	0 to 34,5	3 to 9	0,2 to 0,62	500	34,5	575	39,6
680	100 to 1700	6,9 to 117,2	9 to 23	0,6 to 1,6	1700	117,2	2500	172,4
303 stainless steel piston with Buna N O-ring and 303 stainless steel 1/4" NPT (female) pressure connection (not recommended for gas service since drying of the O-ring can allow bleeding of the medium into the atmosphere)								
610	75 to 1000	5,2 to 68,9	30 to 150	2,1 to 10,3	1000	68,9	10,000	689,5
612	125 to 3000	8,6 to 206,8	40 to 250	2,8 to 17,2	3000	206,8	10,000	689,5
614	500 to 6000	34,5 to 413,7	50 to 400	3,4 to 27,6	6000	413,7	10,000	689,5

^{*} Over Range Pressure: The maximum pressure that may be applied continuously without causing damage and maintaining set point repeatability.
** Proof Pressure: The maximum pressure to which a pressure sensor may be occasionally subjected, which causes no permanent damage. The unit may require calibration (e.g., start-up, testing).

Model	Adjustable Set Poin Low end of range on fa High end of range on r	ıll;	Deadband		Over Range Pressure*		Proof Pressure**	·
	psi (unless noted)	bar (unless noted)	psi (unless noted)	bar (unless noted)	psi (unless noted)	bar (unless noted)	psi (unless noted)	bar)
Brass bel	lows with nickel-plated bra	ass 1/4" NPT (femal	e) pressure connec	tion; Models 126 and 13	34 have zinc-pl	ated steel sprin	g exposed to i	media
126	30 "Hg Vac to 0 psi	-1 to 0	0.2 to 0.8 "Hg	6,8 to 27,1 mbar	3	0,2	5	0,3
134	30 "Hg Vac to 20 psi	-1 to 1,4	0.2 to 0.8 "Hg	6,8 to 27,1 mbar	20	1,4	25	1,7
136	0 to 50" wc	0 to 124,5 mbar	3 to 6 "wc	7,5 to 14,9 mbar	50 "wc	124,5 mbar	5	0,3
142	0 to 18	0 to 1,2	4 to 7 "wc	10 to 17,4 mbar	18	1,2	25	1,7
148	0 to 40	0 to 2,8	0.1 to 0.4	6,9 to 27,6 mbar	40	2,8	40	2,8
152	0 to 50	0 to 3,4	0.1 to 0.5	6,9 to 34,5 mbar	50	3,4	75	5,2
156	3 to 100	0,2 to 6,9	0.2 to 0.8	13,8 to 55,2 mbar	100	6,9	125	8,6
160	50 to 180	3,4 to 12,4	0.3 to 1	20,7 to 68,9 mbar	180	12,4	180	12,4
Phosphor to media	bronze bellows with nicke	el-plated brass 1/4"	NPT (female) press	sure connection; Model 2	218 has 300 se	eries stainless st	eel spring exp	osed
218	30 "Hg Vac to 0 psi	-1 to 0	1 to 2 "Hg	33,9 to 67,7 mbar	0	0	30	2,1
222	0 to 20	0 to 1,4	0.5 to 1	34,5 to 68,9 mbar	20	1,4	30	2,1
224	0 to 30	0 to 2,1	0.5 to 1	34,5 to 68,9 mbar	30	2,1	45	3,1
226	0 to 50	0 to 3,4	0.7 to 1.3	48,3 to 89,6 mbar	50	3,4	75	5,2
230	0 to 100	0 to 6,9	1 to 2	68,9 mbar to 0,1 bar	100	6,9	110	7,6
258	0 to 50	0 to 3,4	1.5 to 2.5	0,1 to 0,2	50	3,4	75	5,2
266	0 to 100	0 to 6,9	2 to 5	0,1 to 0,3	100	6,9	150	10,3
270	0 to 200	0 to 13,8	3 to 5	0,2 to 0,3	200	13,8	250	17,2
272	0 to 250	0 to 17,2	3 to 5	0,2 to 0,3	250	17,2	330	22,8
274	0 to 300	0 to 20,7	4 to 6	0,3 to 0,4	300	20,7	350	24,1

Type J6D

Standard adjustable deadband models; additional models are available with adjustable deadband by specifying option 1520. Refer to options on page 6 for availability.

Brass bellows with nickel-plated brass 1/4" NPT (female) pressure connection; Models 126 and 134 have zinc-plated steel spring exposed to media								
126	30 "Hg Vac to 0 psi	-1 to 0	0.3 to 1.25 "Hg	10,2 to 42,3 mbar	3	0,2	5	0,3
134	30 "Hg Vac to 20 psi	-1 to 1,4	0.3 to 1.25 "Hg	10,2 to 42,3 mbar	20	1,4	25	1,7
142	0 to 18	0 to 1,2	5 to 16 "wc	12,4 to 39,8 mbar	18	1,2	25	1,7
148	0 to 40	0 to 2,8	0.1 to 0.8	6,9 to 55,2 mbar	40	2,8	40	2,8
156	3 to 100	0, 2 to 6,9	0.5 to 2	34,5 to 137,9 mbar	100	6,9	125	8,6



HOW TO ORDER

BUILDING A PART NUMBER

Select a Type

Refer to the "Type" section below.

Determine type number based on switch output, enclosure, adjustment and reference.

Fill in the type portion of your part number with the corresponding number.

Select a Model

Refer to the "Model Charts".

Determine model based on adjustable range, deadband and proof pressure.

Fill in the model portion of your part number with the corresponding number.

Select an **Option**

Refer to the "Options" section.

Determine option number based on switch output, optional materials or other product enhancements.

Fill in the option portion of your part number with the corresponding number.

Leave "option" portion blank if no options are needed. FOR MULTIPLE OPTIONS: Call United Electric Controls.

TYPE DESCRIPTION

Pressure **Type J6** - One SPDT output; epoxy coated enclosure; internal adjustment with no reference dial

Type J6D - Adjustable deadband; one SPDT output; epoxy coated enclosure; internal adjustment with

no reference dial

SWITCH OPTIONS*

0140	Gold flashed contacts, 1 A 125 VAC resistive; NOT AVAILABLE TYPE J6D
0500	Close deadband, 5 A 125/250 VAC resistive; NOT AVAILABLE TYPE J6D
1070	10 A 125 VDC resistive; deadband and minimum set point will increase; NOT AVAILABLE TYPE J6D
1520	Adjustable deadband, 15 A 125/250/277 VAC resistive. Adjustment wheel changes rise setting only - if
	adjustment on fall setting is required, use primary adjustment. NOT AVAILABLE ON MODELS 258-274,
	354-364, 610-614, 680. NOTE: Type J6D includes option.
1530	External manual reset, 15 A125/250/480 VAC resistive, latches on rising pressure only; NOT AVAILABLE
	TYPE J6D
2000	20 A 125/250 VAC resistive; NOT AVAILABLE TYPE J6D

SENSOR AND OTHER OPTIONS

M201	Factory set one switch; specify increasing or decreasing pressure and set point
M277	Range indicated on nameplate in kPa or MPa factory selected
M278	Range indicated on nameplate in Kg/cm ²
M405	Intrinsic safety compliance for European Union per ATEX standards
M406	Instrinsic safety compliance for Russia per Gosgortechnadzor standards
M407	CE compliance to Pressure Equipment Directive (category IV); NOT AVAILABLE MODELS 126, 218, S126B
M444	Paper ID tag
M446	Stainless steel ID tag & wire attachment
M540	Viton® construction (deadbands and low end of range may increase slightly); wetted parts include Viton®
	O-ring and standard connection material. AVAILABLE ON MODELS 610-614 ONLY
M550	Oxygen service cleaning; internal construction may change
M913	1/4" NPT (female) 316L stainless steel pressure connection. AVAILABLE MODELS S126-S160B
M914	1/2" NPT (female) 316L stainless steel pressure connection. AVAILABLE MODELS 354-364


^{*} All switches have limited DC capabilities. Consult factory for details. **Viton**® is a registered trademark of E.I. DuPont

DIMENSIONAL DRAWINGS

Dimensional drawings for all models may be found at www.ueonline.com

Internal Set Point Adjustment

Types J6, J6D

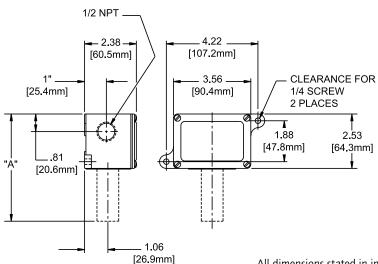


Dimension A						
Models	Inches	mm	NPT			
126-160	5.06	128.5	1/4			
S126B-S160B	5.47	138.9	1/2			
218-230	4.31	109.5	1/4			
258-274	4.75	120.7	1/4			
354-364	4.78	121.4	1/4			
610-614	5.72	145.3	1/4			
680	4.97	126.2	1/4			


All dimensions stated in inches (millimeters)

Pressure Sensors


Models 218-230

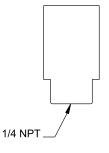


Models 126-160

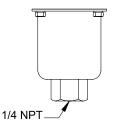


Models S126B-S160B

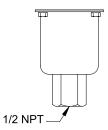


Models 610-614

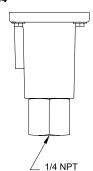

Models 258-274

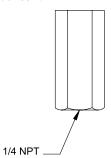

Models 354-364, 680

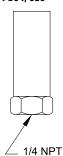

RECOMMENDED PRACTICES AND WARNINGS

United Electric Controls Company recommends careful consideration of the following factors when specifying and installing UE pressure and temperature units. Before installing a unit, the Installation and Maintenance instructions provided with unit must be read and understood.

- To avoid damaging unit, proof pressure and maximum temperature limits stated in literature and on nameplates must never be exceeded, even by surges in the system. Operation of the unit up to maximum pressure or temperature is acceptable on a limited basis (e.g., start-up, testing) but continuous operation must be restricted to the designated adjustable range. Excessive cycling at maximum pressure or temperature limits could reduce sensor life.
- A back-up unit is necessary for applications where damage to a primary unit could endanger life, limb or property. A high or low limit switch is necessary for applications where a dangerous runaway condition could result
- The adjustable range must be selected so that incorrect, inadvertent or malicious setting at any range point cannot result in an unsafe system condition
- Install unit where shock, vibration and ambient temperature fluctuations
 will not damage unit or affect operation. Orient unit so that moisture
 does not enter the enclosure via the electrical connection. When
 appropriate, this entry point should be sealed to prevent moisture entry.
- Unit must not be altered or modified after shipment. Consult UE if modification is necessary.
- Monitor operation to observe warning signs of possible damage to unit, such as drift in set point or faulty display. Check unit immediately.
- Preventative maintenance and periodic testing is necessary for critical applications where damage could endanger property or personnel.
- · For all applications, a factory set unit should be tested before use.
- Electrical ratings stated in literature and on nameplate must not be exceeded. Overload on a switch can cause damage, even on the first cycle. Wire unit according to local and national electrical codes, using wire size recommended in installation sheet.
- Do not mount unit in ambient temp. exceeding published limits.

LIMITED WARRANTY

Seller warrants that the product hereby purchased is, upon delivery, free from defects in material and workmanship and that any such product which is found to be defective in such workmanship or material will be repaired or replaced by Seller (Ex-works, Factory, Watertown, Massachusetts. INCOTERMS); provided, however, that this warranty applies only to equipment found to be so defective within a period of 24 months from the date of manufacture by the Seller. Seller shall not be obligated under this warranty for alleged defects which examination discloses are due to tampering, misuse, neglect, improper storage, and in any case where products are disassembled by anyone other than authorized Seller's representatives. EXCEPT FOR THE IMITED WARRANTY OF REPAIR AND REPLACEMENT STATED ABOVE, SELLER DISCLAIMS ALL WARRANTIES WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE.

LIMITATION OF SELLER'S LIABILITY

Seller's liability to Buyer for any loss or claim, including liability incurred in connection with (i) breach of any warranty whatsoever, expressed or implied, (ii) a breach of contract, (iii) a negligent act or acts (or negligent failure to act) committed by Seller, or (iv) an act for which strict liability will be inputted to seller, is limited to the "limited warranty" of repair and/or replacement as so stated in our warranty of product. In no event shall the Seller be liable for any special, indirect, consequential or other damages of a like general nature, including, without limitation, loss of profits or production, or loss or expenses of any nature incurred by the buyer or any third party.

UE specifications subject to change without notice.

U.S. SALES OFFICES

United Electric Controls 32 Highland Rd. South Hampton, NH 03827 Phone: 603-394-0078 FAX: 603-394-0175

United Electric Controls 28 N. Wise Ave. Freeport, IL 61032 Phone: 815-235-3501 FAX: 815-235-3847

United Electric Controls 1022 Vineyard Drive Conyers, GA 30013 Phone: 770-483-8400 FAX: 770-929-8716

United Electric Controls 5829 Grazing Court Mason, OH 45040 Phone: 513-398-3175 FAX: 513-398-3076

United Electric Controls 102 Salazar Court Clayton, CA 94517 Phone: 925-524-0210 FAX: 925-524-0210

United Electric Controls 27 Summit Terrace Sparta, NJ 07871 Phone: 973-271-2550 FAX: 973-729-6099

United Electric Controls 12630 Summerwood Glen Houston, TX 77041 Phone: 832-243-0119 FAX: 832-243-0140

CANADA

EASTERN 68 Mosley Crescent Brampton, Ontario Canada L6Y 5C8 Phone: 905-455-5131 FAX: 905-455-5131 WESTERN
148 Silver Ridge Close N.W.
Calgary, Alberta
Canada T3B 3T4
Phone: 403-247-3724

FAX: 403-247-3724

INTERNATIONAL OFFICES

BELGIUM

United Electric Controls-Europe G. Van Gervenstraat 19A B-9120 Beveren-Waas, Belgium Phone: 32-37554-383 FAX: 32-37552-747

CHINA

United Electric Controls Room 1114, No. 511 Shenshi Building Weihai Road Shanghai 200041, P.R. China Phone: +8621-6255 8059 FAX: +8621-6255 8349

GFRMANY

United Electric Controls An Der Zentlinde 21 D-64711 Erbach, Germany Phone: 496-062-7400 FAX: 496-062-7501

MALAYSIA

United Electric Controls, Far East No. 1-2-2, 2nd Floor Jalan 4/101C Cheras Business Centre Batu 5, Jalan Cheras 56100 Kuala Lumpur, Malaysia Phone: 603-9133-4122 FAX: 603-9133-4155

MEXICO

United Electric Controls Andador Austria 102 Fracc. Petroquimica CP 89365 Tampico, Tamaulipas Mexico Phone: 833-132-3726 FAX: 833-132-3726

RUSSIA

United Electric Controls, Moscow Kuusinena str., 19A, Office 310 Moscow, 125252, Russia Phone: +7 (095) 792-88-06 FAX: +7 (095) 258-92-12

UE

UNITED ELECTRIC CONTROLS

180 Dexter Avenue, P.O. Box 9143 Watertown, MA 02471-9143 USA Telephone: 617 926-1000 Fax: 617 926-2568 http://www.ueonline.com